


MANUAL

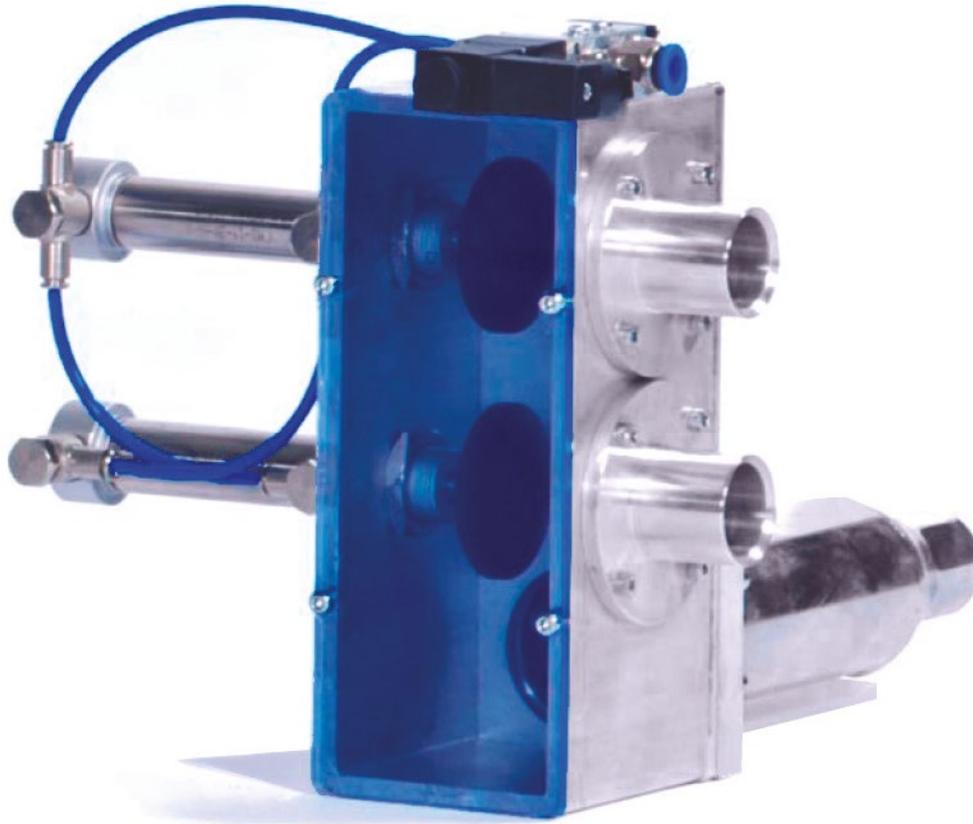

RS2000 - Ratio-Selector 2000

Serial No.....
LT no.: 986910

Labotek

Safety Information

The RS2000 may only be used for the purposes specified. The RS2000 cannot be used for powders or liquids, nor for living creatures. It may only be used with the accessories (for e.g., motor, filter, etc.) supplied or approved by Labotek A/S. Use of any other equipment may cause personal injury or property damage. It is crucial that the voltage supply must match as specified on the nameplate of the dryer or blower. Use of power source voltage less or more than the specified may again cause personal injury or property damage.

It is highly recommended that a trained/qualified operator must operate the RS2000 following the correct instructions. The RS2000 may not be used in areas with any danger of explosions.

RS2000 is an external mounted proportioning valve, for non critical dosing of two materials into same receiver.

The RS2000 unit is made in lightweight aluminium house and features a glass window.

Safety Measures

| Sign | Precautions |
|---|---|
|  | ELECTRICAL HAZARD! Before connecting the equipment to a power source, make sure the voltage supplied is the same as that specified. Using a power source with voltage more or less than specified rating is harmful to the equipment. |


Technical Data

Incoming supply: 1N(2)~208-400V 50-60Hz TN_S

Main Switch 2-POL


Transformer 208-400/24V 15VA

Control module 24VAC

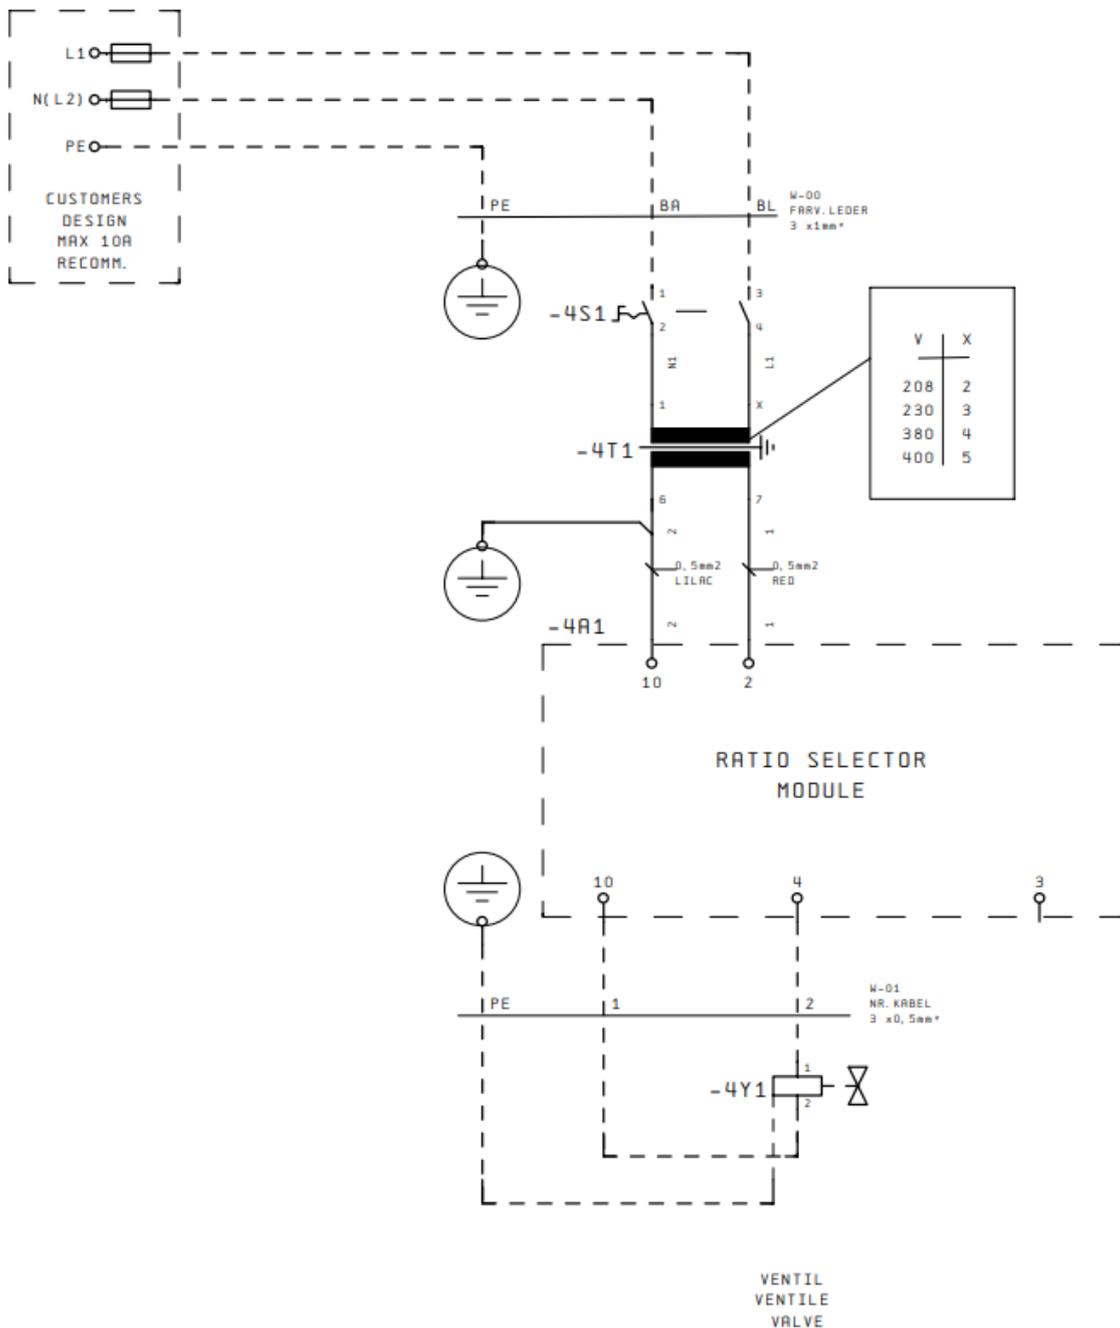

Power On/Off

Turn on the power by moving the power switch to Position-"1".

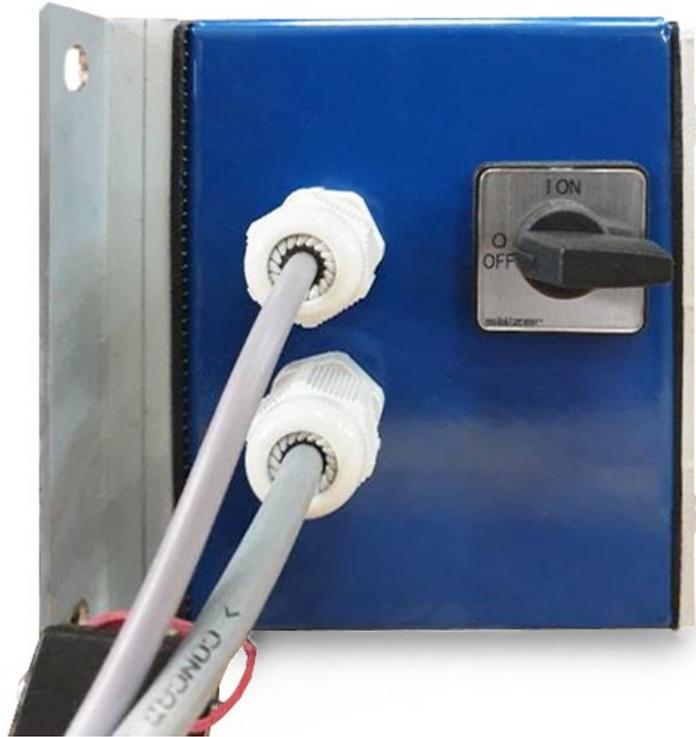

Then only, turn off the power by moving the power switch to Position-"0".

Set Time



You press manually the +/- to set the timer from 0-99 seconds on each line 1 or 2.

Customer Service/Support

Please contact our customer service/support if one should encounter problem with the appliance or the control itself. Our service/support team would be very happy to help.

For more information on service, repairs and warranty please visit: www.labotek.dk/contact-us/meet-the-team. You can also write us at: info@labotek.dk.



Labotek